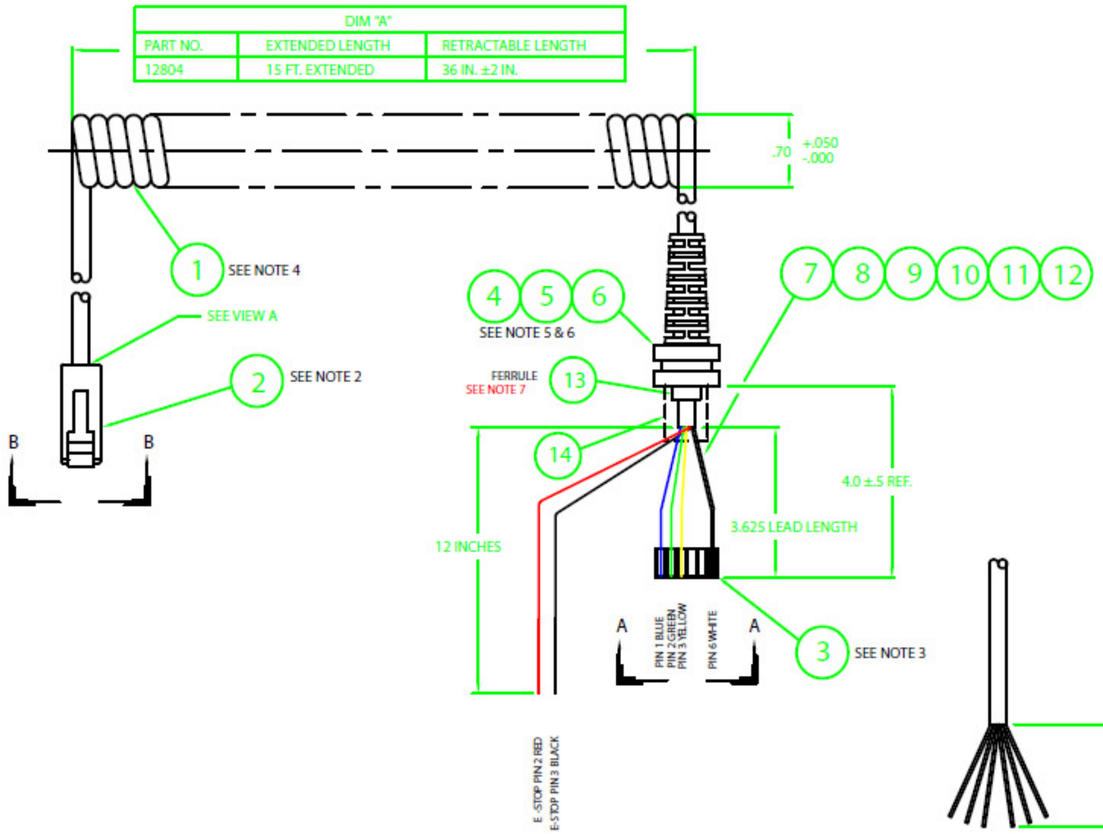

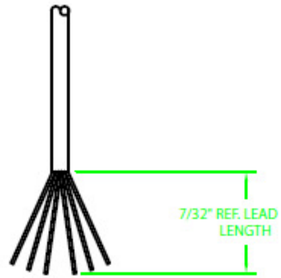

VIEW A

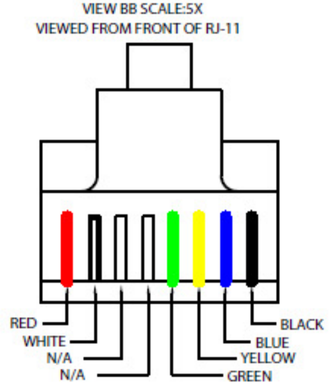

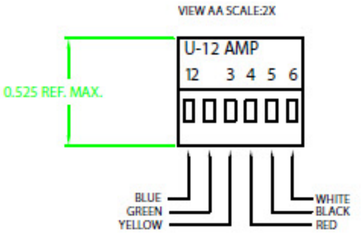

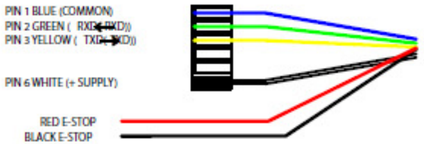

NOTES:
1. DRAWING MUST BE PLOTTED IN COLOR
2. USE IDEAL INDUSTRIES HAND TOOL TO ASSEMBLE WIRE INTO RJ-11.
   IDEAL NO. 27-715
3. USE AMP TOOL TO ASSEMBLE WIRE INTO CONNECTION.
   58075-1 HANDLE ASSEMBLY
   58246-1 DIE
4. JACKET IS BLACK POLYURETHANE
5. MAKE TO TWO TECH PART SPECIFICATION DRAWING 10171
6. EQUIVALENT ADHESIVE MAY BE USED
7. MUST USE IDEAL INDUSTRIES CRIMP TOOL DIE #30-581 TO CRIMP FERRULE TO CABLE.